



INSTALLATION GUIDE

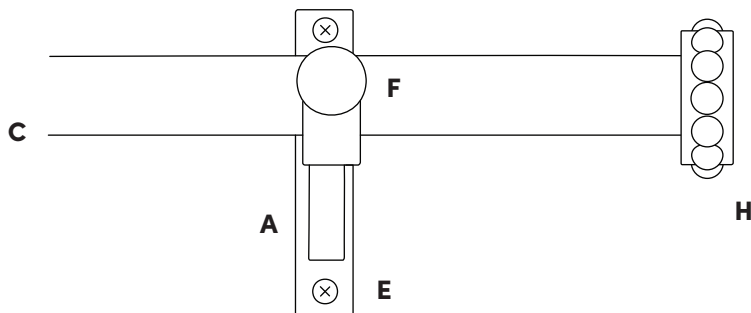


PARTS INCLUDED

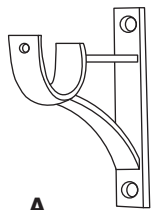


A

End Brackets (x2)



B

Center Bracket
**Included with orders
featuring rods over 60 inches.*

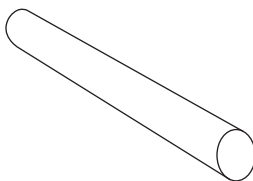

C

Custom Cut Drapery Rod



D

50lb Wall Anchors




E

Decorative
Mounting Screws




F

Decorative Screw Set




G

Allen Key

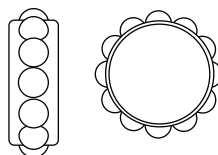

H


Decorative Finial or End Cap Set

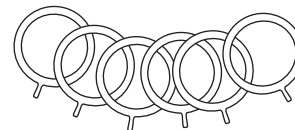


I

Curtain Rings with Eyelets
(Optional)


RECOMMENDED PARTS - NOT INCLUDED

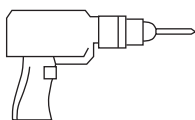


3/8" Drill Bits




Phillips Screwdriver

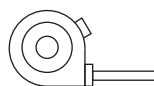

Measuring Tape

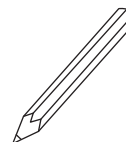


Pencil



Level

INSTALLATION GUIDE

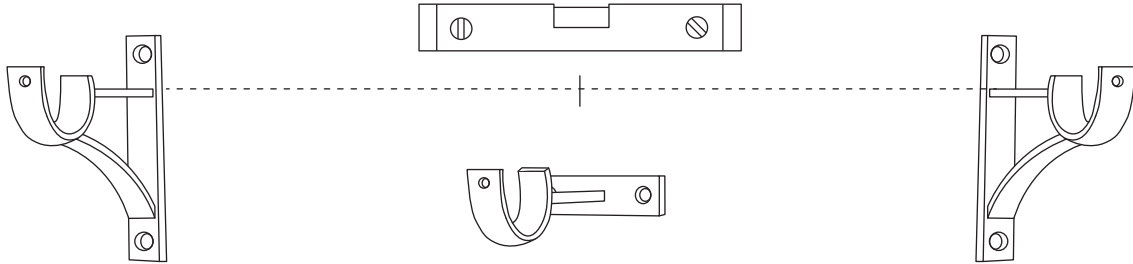

ROD & BRACKET INSTALLATION

- ① **Mark Hardware Placement** - Use a tape measure and level to determine the desired rod height and bracket locations. Mark the end bracket positions.
- ② **Mark Mounting Screw Placement** - Hold the actual end bracket in place and mark every mounting hole through the bracket itself. Do not use a printed drawing to locate holes.
- ③ **In Drywall** - Drill a pilot hole using the drill-bit diameter specified for the supplied 50 lb wall anchor. Insert the anchor and gently tap until the collar is flush with the wall. Place the bracket over the anchor and drive the matching screw until snug. Do not overtighten.


In Stud - Use the supplied wood screw. Tighten until snug.
- ④ **Center Bracket** - For rods over 60 inches, set the rod in the installed end brackets, level it, then mark and mount the center bracket using the same method. If more than one center bracket is supplied, space them evenly between the end brackets and place a support at each rod joint.
- ⑤ **Attach Finials or End Caps** - Before placing the rod onto the mounting brackets, attach the finial or end cap to the end of the rod using the supplied Allen key. Tighten until securely fastened, taking care not to overtighten.
- ⑥ **Install Drapery Rod** - Rest the rod in the bracket cradles. Ensure the rod is centered and fully seated in every bracket.
- ⑦ **Secure the Rod** - Tighten each decorative set screw with the supplied Allen key until snug. Confirm the rod is level before hanging the drapery.

IMPORTANT


The 50 lb rating requires a sound wall and correct installation. Do not use anchors in damaged drywall, oversized holes or ceilings. When in doubt, mount into framing or consult a qualified installer.

INSTALLATION GUIDE


CURTAIN RINGS AND CARE

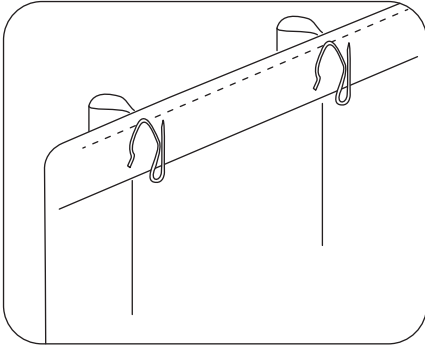

- 1** **Ensure the drapery pin** (not included) is secure to the drapery header, below the finished top edge.

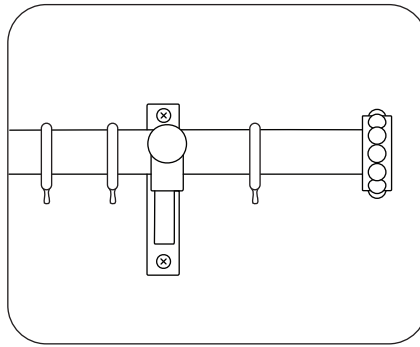

- 2** **Slide the rings** onto the rod. Leave a ring outside each end bracket if desired.

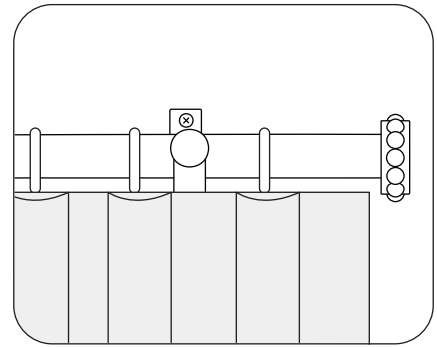

- 3** **Install the drapery** and test the rings. They should travel freely and the eyelets should not be visible.

CARE AND CLEANING

To preserve the beauty and integrity of your solid brass hardware, dust regularly with a soft, lint-free or microfiber cloth. When needed, clean gently with a slightly damp microfiber cloth and mild soap, then dry thoroughly. This product features a lacquered finish protected by a clear coating that helps preserve its original color and appearance. Do not use brass cleaner, metal polish, abrasive materials, scouring pads, or harsh chemicals, as these may damage the lacquered surface. Due to the nature of our hand-finishing process, products may have lot-to-lot variations in color and/or finish.

HAVE A QUESTIONS?

Please contact our Customer Care team at hello@modern-matter.com or 704-749-2110



MODERN MATTER

DRAPERY HARDWARE

INSTALLATION GUIDE & TEMPLATE